



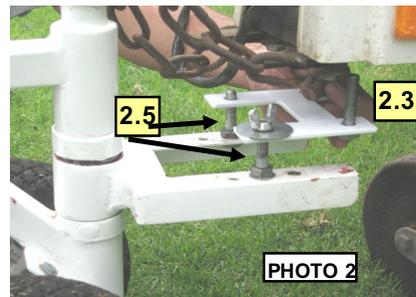

## Installation Instructions

### Important Points to Remember when installing Eazy Move

- 1) Ensure that the caravan's brake is disengaged (Towing connection must be fully pulled out.). (See photo 1.1)
- 2) Keep in mind that Eazy Move is in an upright position when measuring the position to fit the H-bracket to the caravan. (See Photo 1.2)
- 3) To fit the H-bracket when the safety chain is bolted to the bottom of the A-frame of the caravan, the same bolts can be used. Install H-bracket above the safety chain. (See photo 2.3)
- 4) When the safety chain is welded to the A-frame, you must drill two 12mm holes to fit the H-bracket with 10mm bolts. (See photo 2.3)
- 5) The H-bracket is always fitted the same on all vans or trailers. Sometimes the towing connectors differ in length and then the two wing-nut bolts on the front fork on Eazy Move must be moved to other holes that are provided on the mover. (See photo 3.1)

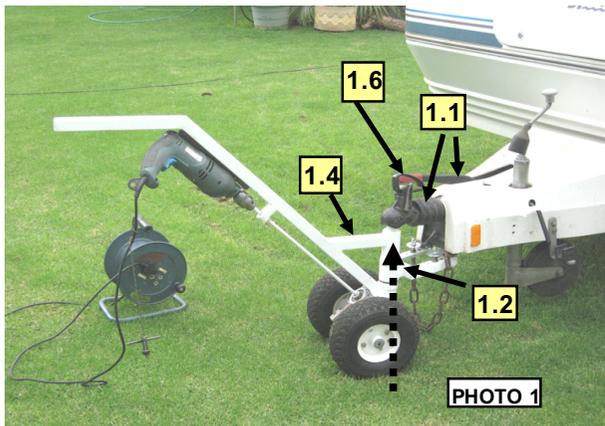

### How to hook and unhook the Eazy Move after the H-bracket has been installed

- a) Lift the caravan with the jockey wheel. Eazy Move will then easily fit under the caravan.
- b) Carry and fit the Eazy Move at the handle bar. (See photo 1.4)
- c) Get Eazy Move in position. First let the two 10mm bolts fit through their holes in the H-bracket. (See photo 2.5)
- d) With one hand still holding Eazy Move, use the other hand to pull the caravan's towbar upwards (See photo 1.6 ) and then pull Eazy Move up.  
Eazy Move will clip in and it will now hang in its position and you can release both hands.
- e) Tighten the Wingnuts by hand.
- f) After Eazy Move is now in position, the caravan can be jacked down with the jockey wheel and the caravan will be standing on the wheels of Eazy Move and you are ready to go.